


NOTE #1: INSTALL TREE IN HOLE, ADD 1ST LAYER OF COMPACTED SOIL MIX, CUT AND REMOVE ALL BURLAP, TWINE AND WIRE FROM TOP 2/3 OF BALL, ADD SECOND LAYER OF SOIL MIX.

NOTE #2: TREE MUST BE PLANTED SUCH THAT THE TRUNK FLARE IS VISABLE AT THE TOP OF THE ROOT BALL. TREES WHERE THE TRUNK FLARE IS NOT VISABLE SHALL BE REJECTED. DO NOT COVER THE TOP OF THE ROOT BALL WITH SOIL

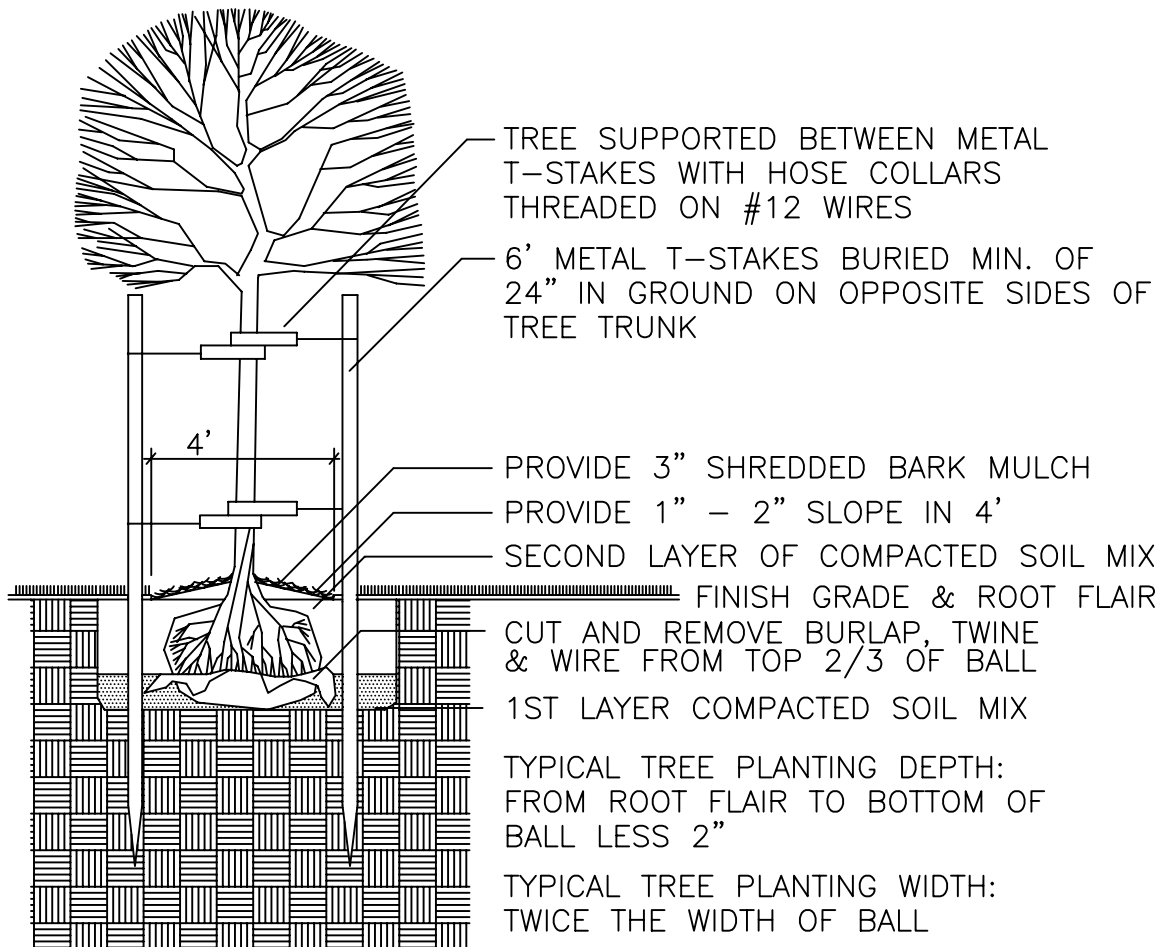

Tree Planting and Staking

Not to Scale

NO.	AUTHORIZED BY	REVISIONS	DATE	



STANDARD PLAN
LA-60